



Assembly Instructions



Vertex International, Inc.
Minnesota, USA
1-877-2VERTEX
www.2VERTEX.com

SD995 Super Duty™ Log & Leaf Cart

STEP 1

Before beginning assembly, you should have:

Assembly Tools

Phillips Screwdriver



AND

Pliers



Product Components




Hardware Pack

- X 2X
1/4" x 2" Screws
- Y 2X
1/4" Nylock Nuts
- Z 2X
Cotter Pins


STEP 2

Attach Frame Assembly to Axle Bracket with (2) 2" Screws and (2) 1/4" Nylock Nuts

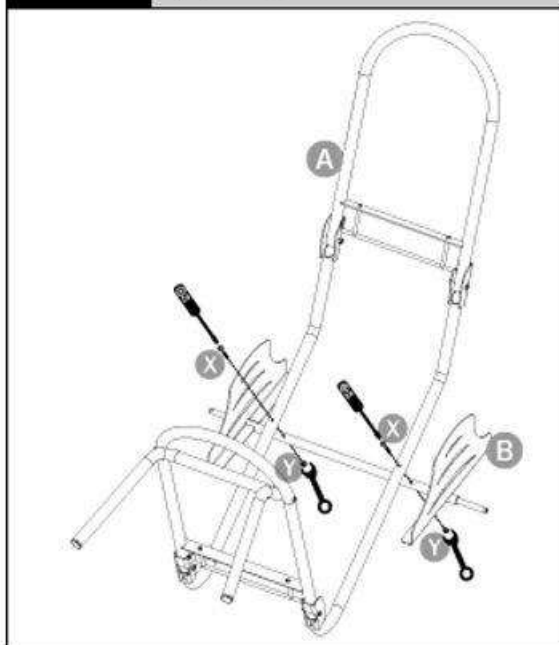

STEP 3

Attach Wheels to Axle Bracket with (2) Cotter Pins

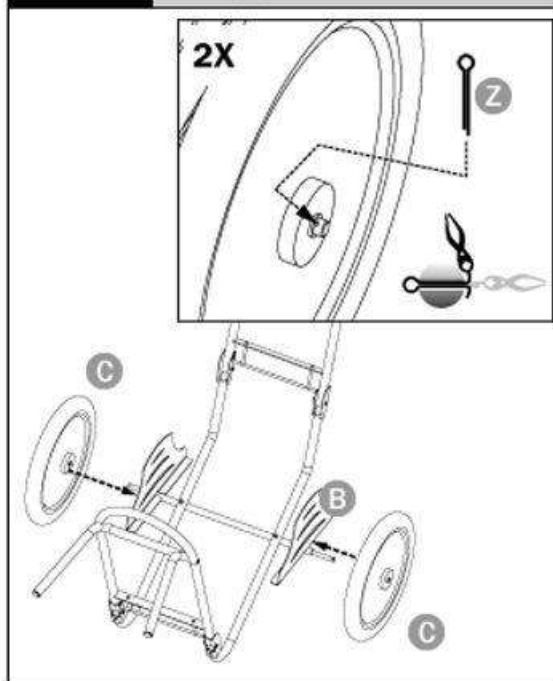

Missing a part?

Please do not return to your store. Your local retailer does

Your complete satisfaction is our #1 priority! Call us and we will

Parts Hotline:
1-877-283-7839